


ENGINE STOP RELAY

INSPECTION

Disconnect the engine stop relay 4P connector, remove the engine stop relay.

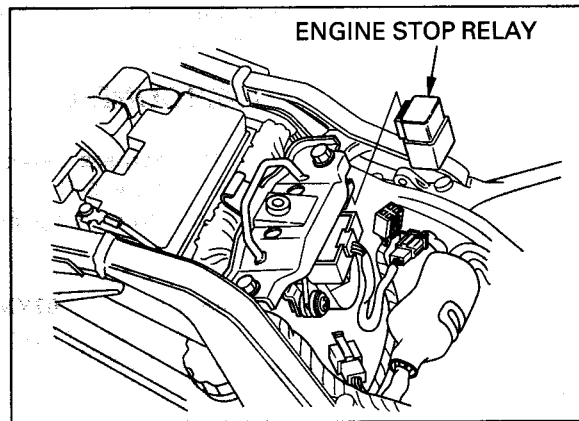

Connect the ohmmeter to the engine stop relay connector terminals.

CONNECTION: Red/White — Black/White

Connect the 12V battery to the following engine stop relay connector terminals.

CONNECTION: Red/Orange — Black

There should be continuity only when the 12V battery is connected.

If there is no continuity when the 12V battery is connected, replace the engine stop relay.

