


IAT SENSOR

REMOVAL/INSTALLATION

Open and support the front end of fuel tank (page 3-4).

Disconnect the IAT sensor connector.

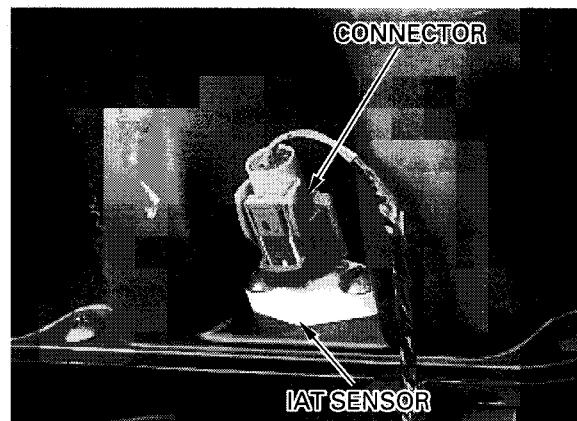

Remove the screws and IAT sensor from the air cleaner housing cover.

Installation is in the reverse order of removal.

